

SAMSUNG OFFICESERV TIME AND DATE CHANGE PROGRAMMING GUIDE

To Change the Time and Date on the Samsung Handsets:

- From any handset press the **Transfer key** and dial [2][0][0]
- The display will show **ENABLE CUS. PROG. & PASSCODE :**
- Enter customer passcode *which is [1][2][3][4] as a factory default*
- Press [1] to **ENABLE CUS. PROG.**, then press the **Speaker Key**
- Enter the time & date program by dialing [5][0][5]

The Time and Date format is as follows:

| | | |
|----|------------------------|---|
| W | (Day of the week, 0-6) | <i>e.g., enter 0 for Sunday and 6 for Saturday.</i> |
| MM | (Month, 01-12) | <i>e.g., enter 01 for January and 12 for December.</i> |
| DD | (Day of the month) | <i>enter a number in the range 01–31.</i> |
| YY | (Year) | <i>enter the last two digits of the year, e.g. 07.</i> |
| HH | (Hours) | <i>24-hour clock enter a number in the range 00–24.</i> |
| MM | (Minutes) | <i>enter a number in the range of 00–59.</i> |

- ENTER THE DATE AND TIME AND THEN PRESS **TRANSFER KEY** TO EXIT